


CABINET STYLES




Large Bevel Profile
Style: Transitional or Modern

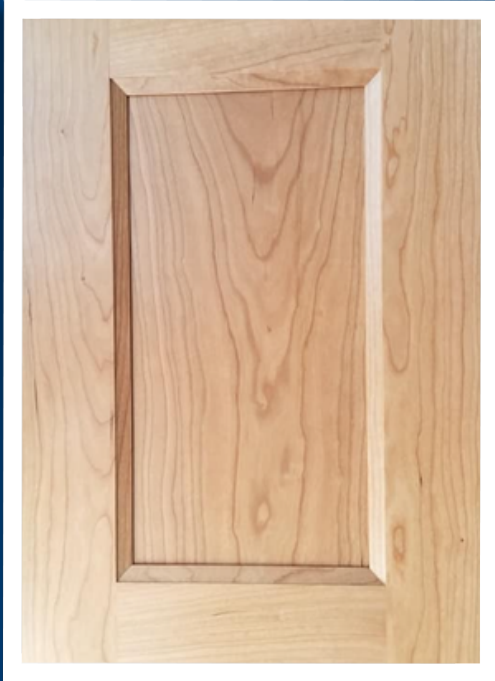

Shaker Style Profile
Style: Modern (45 degree bevel)




Dainty Decorative Profile
Style: Traditional or Transitional

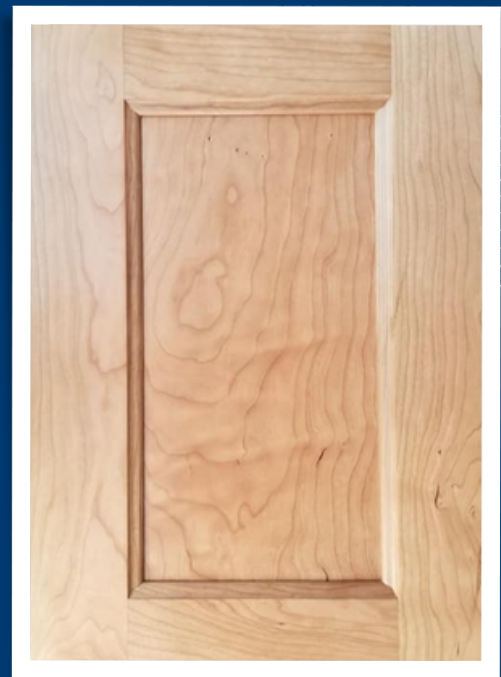


Soft Curved Decorative Profile
Style: Traditional, Transitional or Modern


STANDARD PAINT COLORS

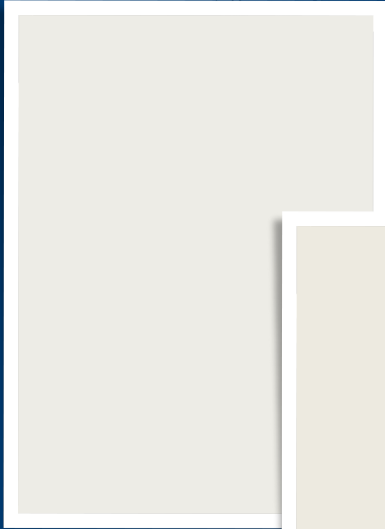

Pure White
SW 7005

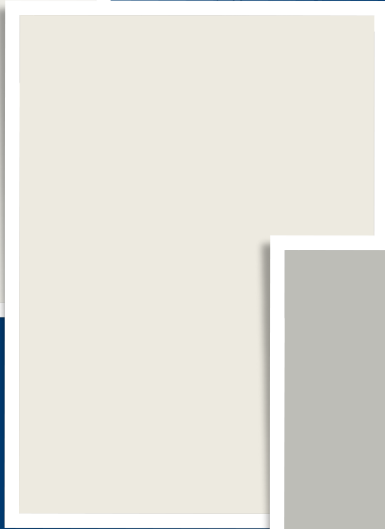


Alabaster
SW 7008

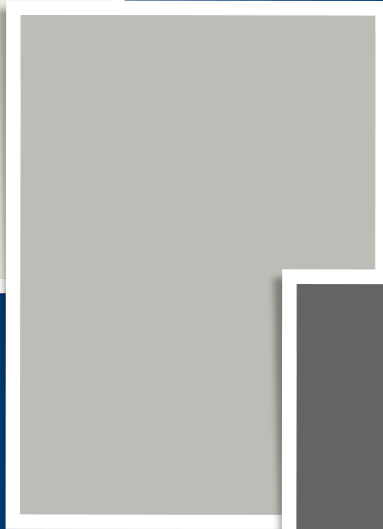

Argos
SW 7065




Grizzle Gray
SW 7068

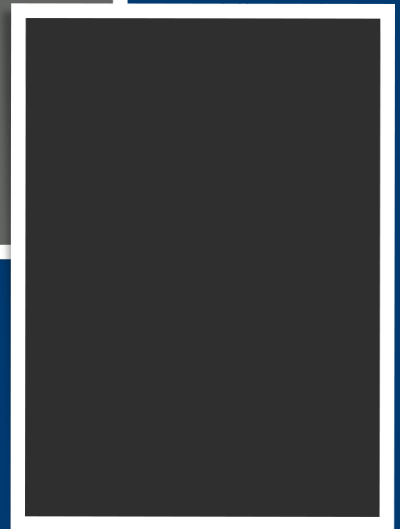

Tricorn Black
SW 6258

STANDARD STAIN COLORS

<https://www.varathanemasters.com/products/fast-dry-wood-stain>

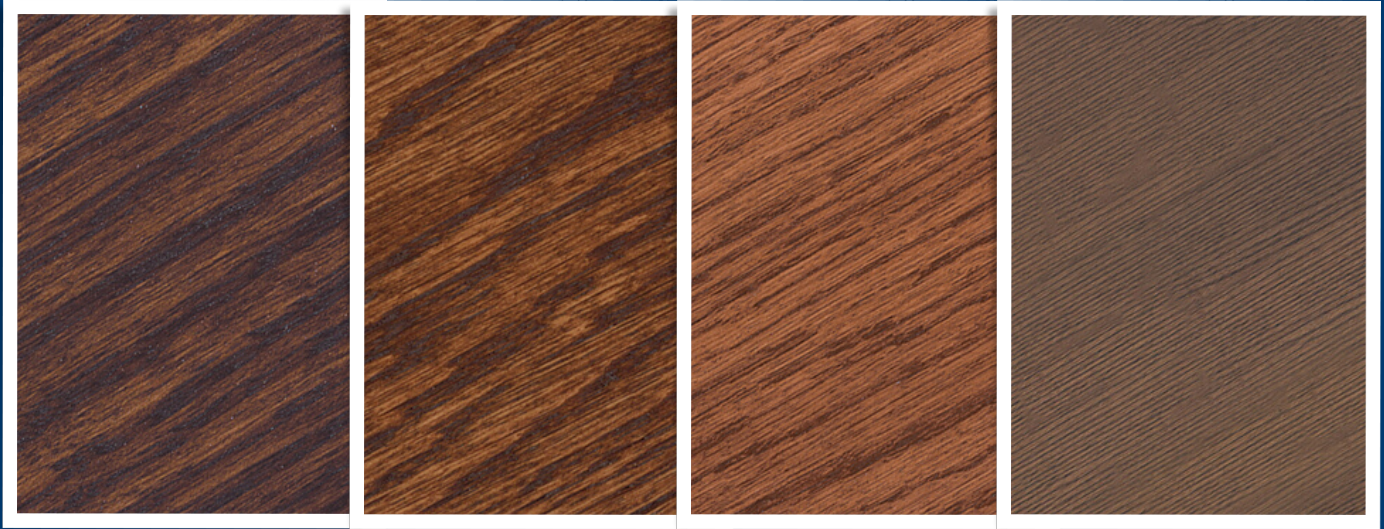

Kona

Dark Walnut

Early American

Briarsmoke



Provincial

Flagstone

Honey Maple




Summer Oak

CABINET PROFILE LEGEND




1. Center Panel – The raised or flat panel in the middle of a door enclosed by stiles and rails.
2. Edge Profile – Shape put on the outside edge of a door or drawer front.
3. Rail Profile – Shape put on the inside edge of a door or drawer front.

CENTER PANEL PROFILES

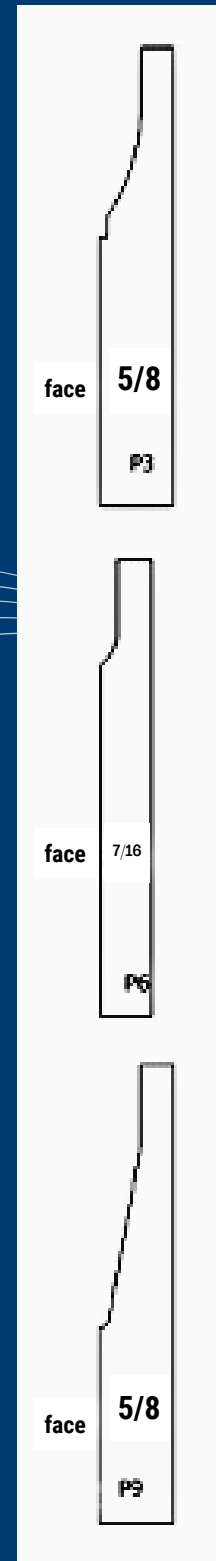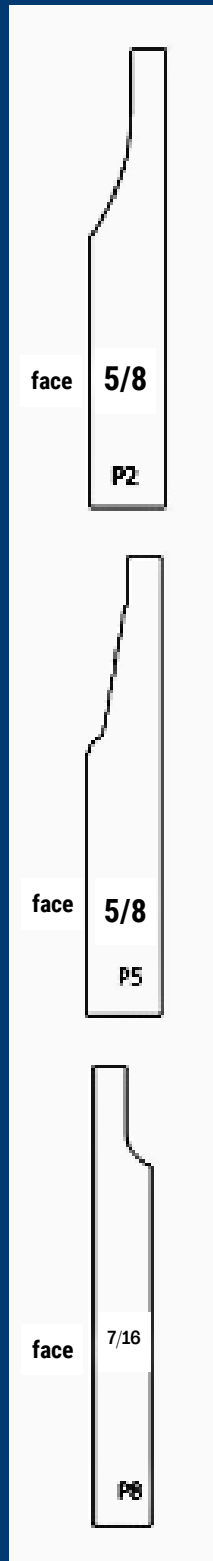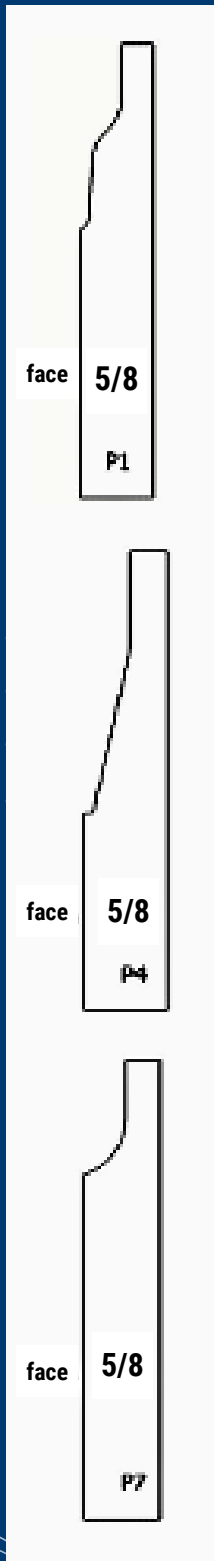


EDGE PROFILES

E1

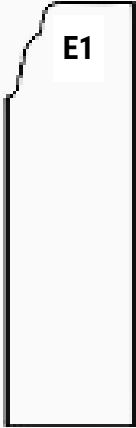

E2

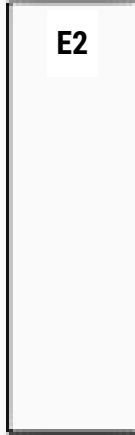

E3




E4



E5




E6

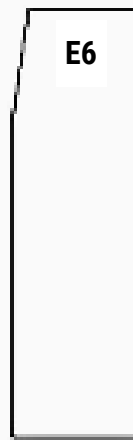


E7




E8

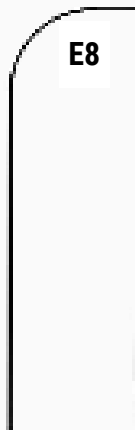

E8

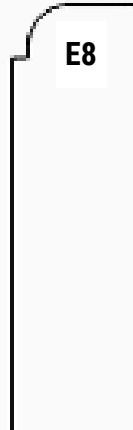


RAIL PROFILES

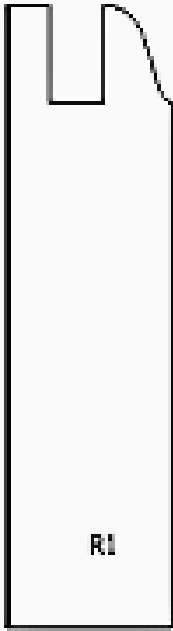

R1




R2

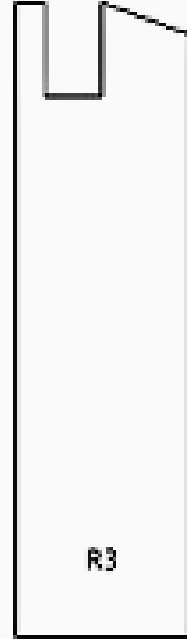

R3



R4

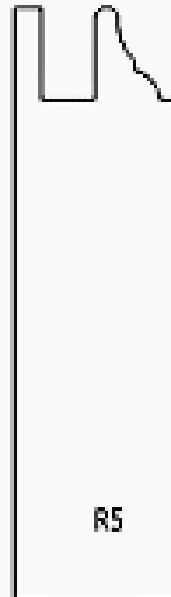

R5